





Visit our EarthWay website to see the assembly video

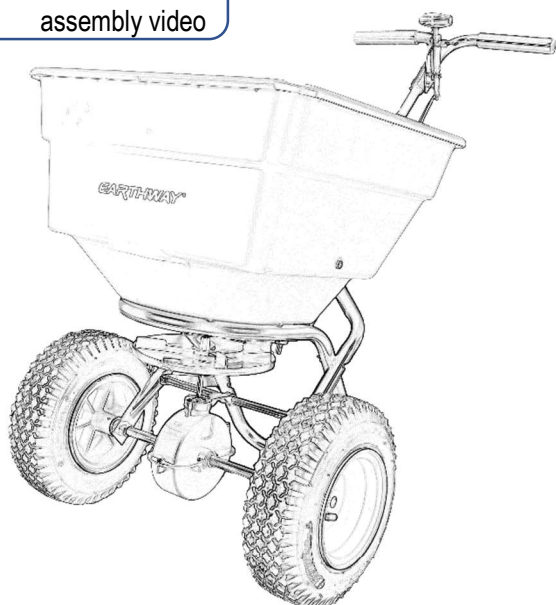

Prior to assembly, you will need:

 
Needle nose pliers



#2 Phillips screwdriver



Two 7/16" or 11mm adjustable or box wrenches

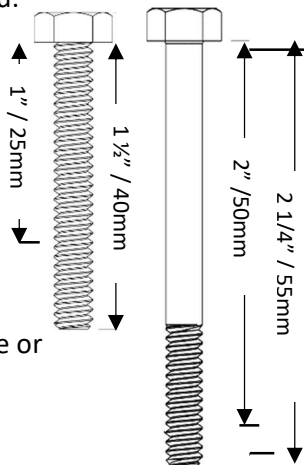

#### SPREADER RATE SETTINGS

LBS PER 1000 SQUARE FEET	GRASS SEED	FERTILIZER SGN 240 (3/32")	SAND SGN 150 (1/16")
1 LB		9	7
2 LB	14	13	10
3 LB	16	16	13
4 LB	18	20	14
5 LB	20	22	16
8 LB		28	22


#### SIDE SPREAD CONTROL

Patent U.S. 10,993,368


Your EarthWay spreader includes a patented feature to prevent fertilizer from being spread to the left side. To activate this feature, slide the lever below the hopper to the back (if standing behind the spreader) and position the left wheel 6"-12" from your sidewalk or border. While activated, the spreader will not waste fertilizer like competitor designs. Competitor deflectors leave 7X the fertilizer inside the wheels from blocking all the material leaving the impeller.

#### SIDESPREAD CONTROL™

#### ASSEMBLY HARDWARE

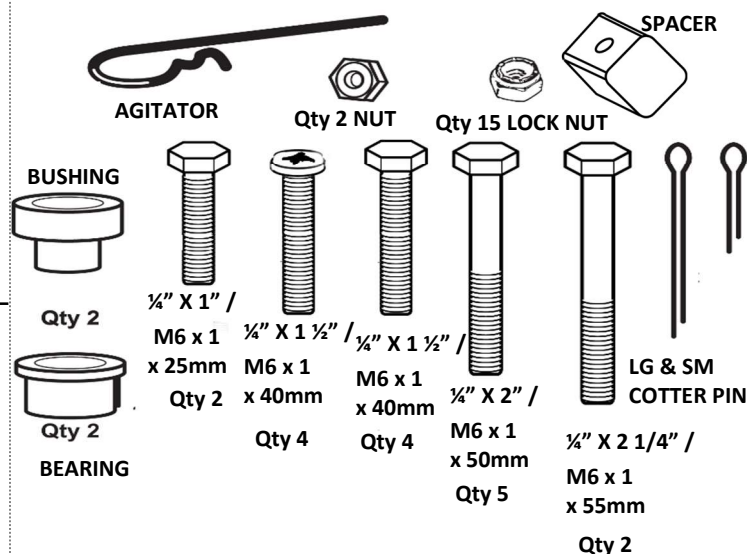

#### SPREADER COMPONENTS

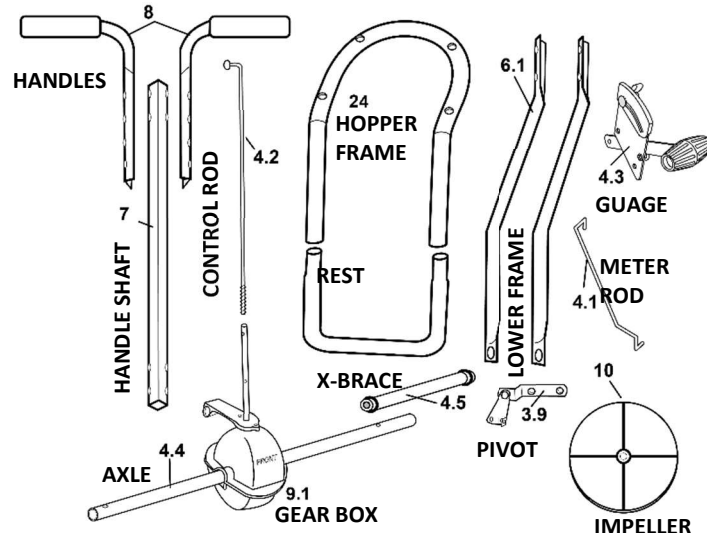

## HELPFUL HINTS


- ☑ Read the directions before assembly.
- ☑ If your spreader does not spread evenly, be sure "FRONT" on the GEARBOX points to the front of the spreader. **The impeller must turn clockwise when pushing forward.** Reversing the GEARBOX during assembly will cause issues.
- ☑ Your spreader is calibrated for three miles per hour, which is a brisk walking speed. Slower or faster speeds will change the spread pattern. Wet fertilizer will also change the spread pattern and flow rate. **Do not use powdered materials as it will damage the gearbox.**
- ☑ Gears are permanently lubricated at the factory. Do not open the GEARBOX or dirt may enter.

IF YOUR SPREADER COMES SEMI ASSEMBLED, SKIP TO STEP #7

## SPREADER ASSEMBLY INSTRUCTIONS

**Step 1:** Remove all components and hardware items from the box. Place the spreader hopper upside down and facing away from yourself.


**Step 2:** Install FRAME using (4) #14 x 1½" ( M6 x 1 x 40mm) Flat Head Phillips screws. **TIGHTEN THESE NOW**

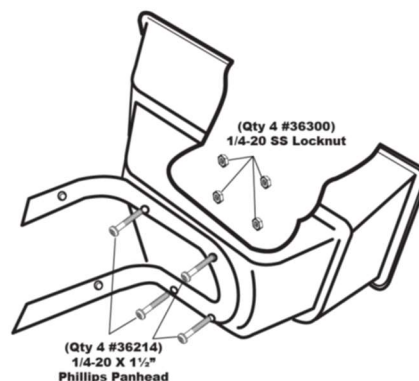

**Step 3:** Install impeller onto pinion shaft by pressing the impeller as shown onto the pinion shaft and turning the impeller while holding the pinion shaft to engage with the **COIN** fully, and press down to secure.


**Next,** insert Cross Brace thru the Gearbox Brace as shown above.

### GEARBOX ASSEMBLY

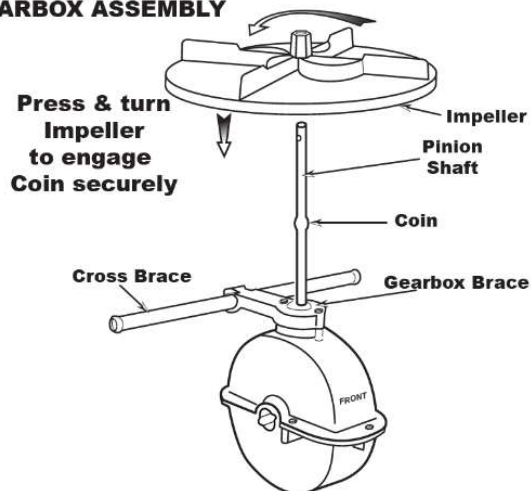

**Step 4:** Install GEARBOX by inserting the PINION SHAFT into hole in center of HOPPER bottom. The word "FRONT" on the GEARBOX must point to Front of the HOPPER.


**NOTE:** Place EarthWay brand towards the front of the hopper.

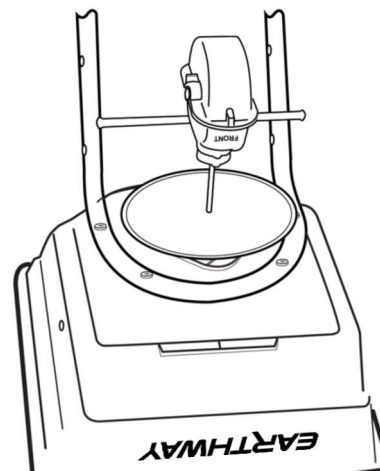

**Step 5: (A)** Install LOWER HANDLES onto FRAME to both sides as shown. Insert 2 1/4" (M6 x 1 x 40mm) bolt through hole in LOWER HANDLE and through hole in FRAME install locknut. **DO NOT TIGHTEN.**

**(B)** Now insert 1 1/2" (M6 x 1 x 40mm) bolt into the hole in LOWER HANDLE, then through FRAME brace. Next into threaded connector in CROSS BRACE. **DO NOT TIGHTEN**



**NOTE:** Numbers on frame brace must be facing toward gear box as shown.

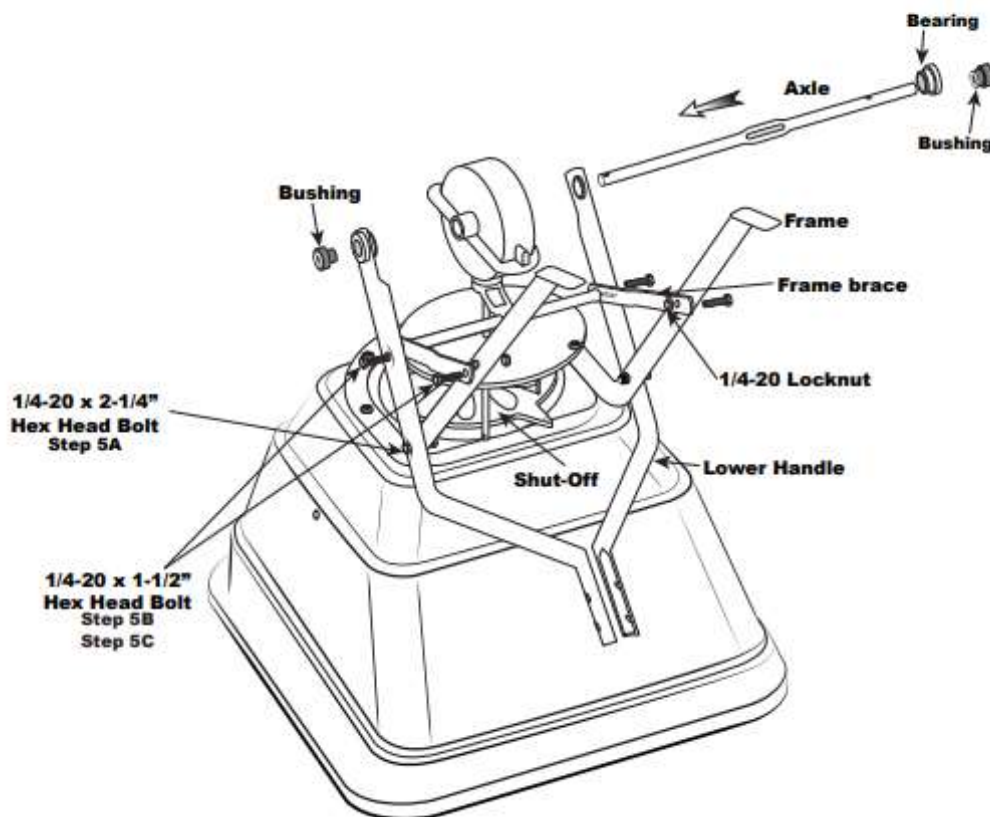

**(C)** Install the FOOT into the FRAME and align the bolt holes in the FOOT and the FRAME (a Phillips screwdriver or large nail is helpful to align the parts)

**(D)** Next insert 1 1/2" (M6 x 1 x 40mm) bolt through other end of FRAME BRACE and through hole in FRAME through the FOOT and install locknut.


**Step 6:** Places the bearings into the lower frame using the “notch” on the bearing to fit into the “notch” on the LOWER AXLE FRAME. Next slide the axle through the bearings, through the GEAR BOX and into the other LOWER AXLE FRAME. Next, install AXLE BUSHING onto the axle, by placing the smaller end in first, slide over the AXLE, past the drilled holes.

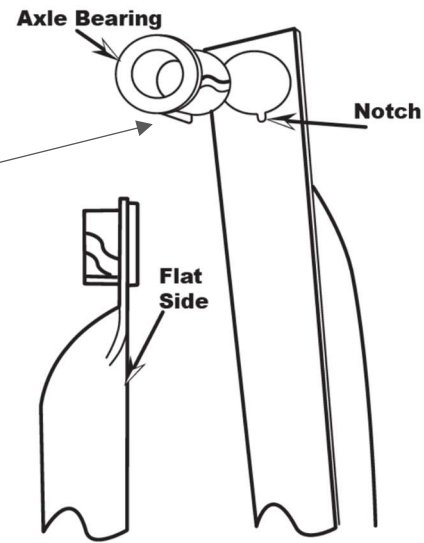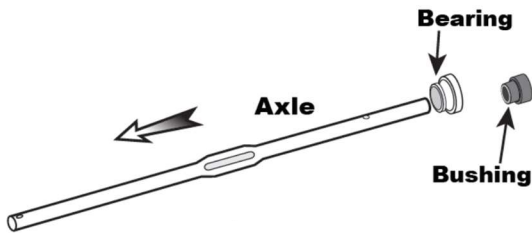

**NOW GO BACK AND TIGHTEN ALL NUTS AND BOLTS STARTING WITH FIRST STEP. DO NOT OVER TIGHTEN.**

**Step 7:** Install DRIVE WHEEL onto the AXLE and align with the cotter pin hole nearest to LOWER HANDLE as shown. Insert 2" cotter pin through wheel and through AXLE. Bend with pliers to prevent pin from falling out.

**Step 8:** Install COAST WHEEL onto the AXLE fully, then using outside cotter pin hole, insert 1" cotter pin through AXLE (**not thru the wheel**). Bend with pliers to prevent pin from falling out.

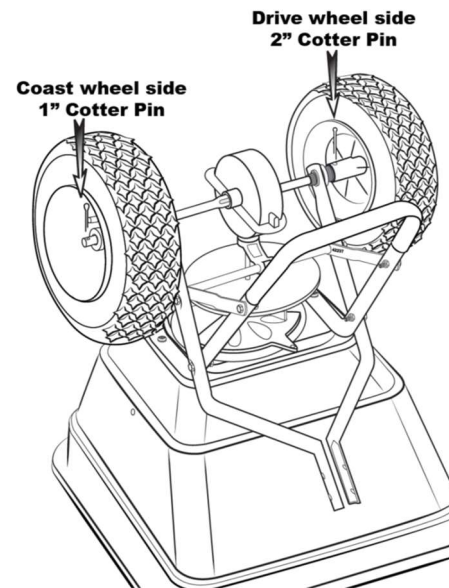

**Step 9:** New for 2021 EarthWay listened to customers who desired an adjustable handle for taller operators.

Select three ¼" x 2" (M6 x 1 x 55mm) bolts and three nylon lock nut to complete this step.


Notice that the square handle shaft has two sets of holes in both ends. The end that the holes are closest to the end of the handle shaft is the top. Place it as shown inbetween the handles.

Start by bolting through the handle spacer using the top most handle bar hole. Then bolt the gauge & lever assembly through the two center holes using two of your ¼" x 2" (M6 x 1 x 55mm) bolts.

**TIGHTEN ALL HARDWARE.**


TALL OPERATOR CONFIGURATION – with the four handle holes, use the bottom two holes for the gauge and use the top hole for the spacer.

## STANDARD POSITION

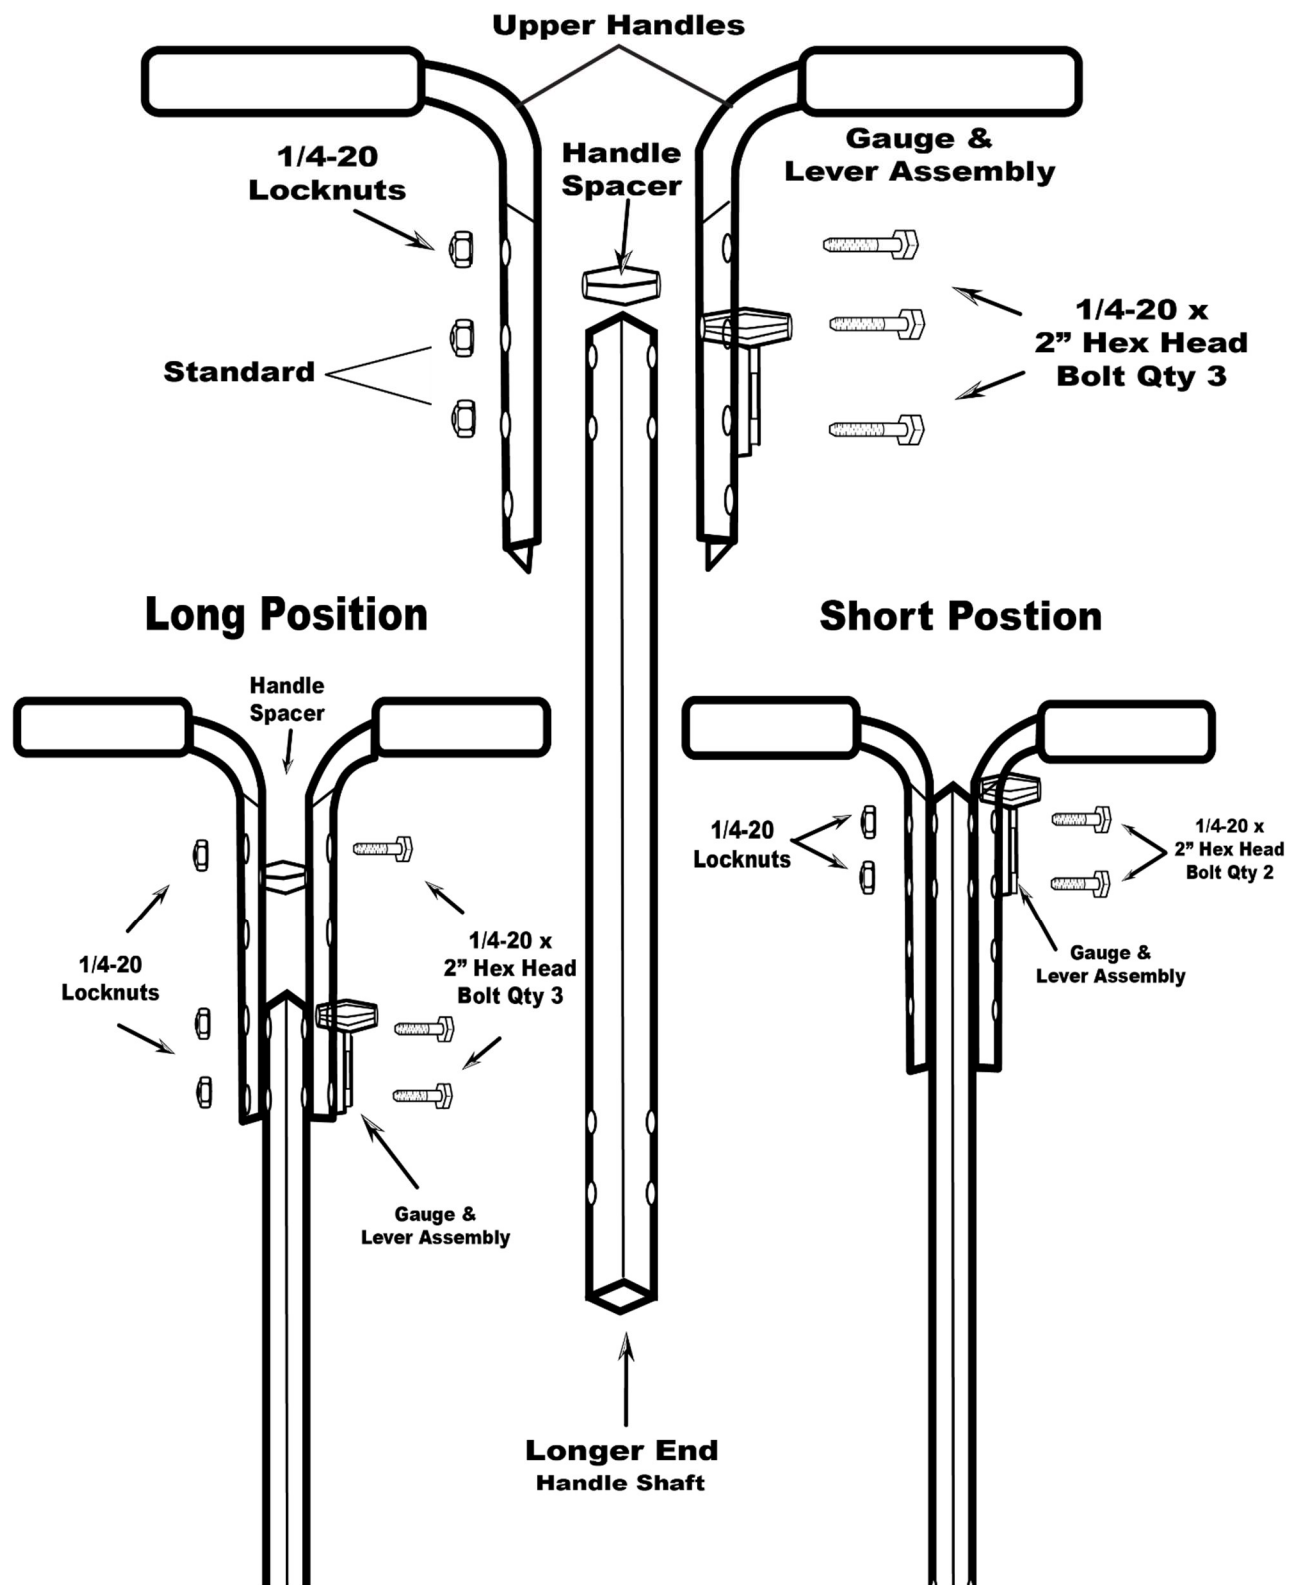





**Step 10:** Take the shortest end of the PIVOT ROD and insert into the SHUT-OFF PLATE. You may have two holes, use the SHUT-OFF PLATE hole towards the back of the spreader. Insert it through the hole (downward) and then rotate 90 degrees so that end is turned parallel as shown.

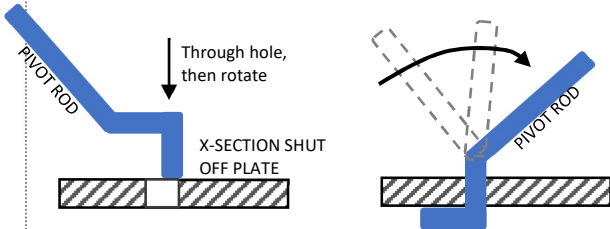

**Step 11:** Locate the PIVOT ROD bracket, insert the other end of the PIVOT ROD through the back of the PIVOT ROD BRACKET as shown (see below).

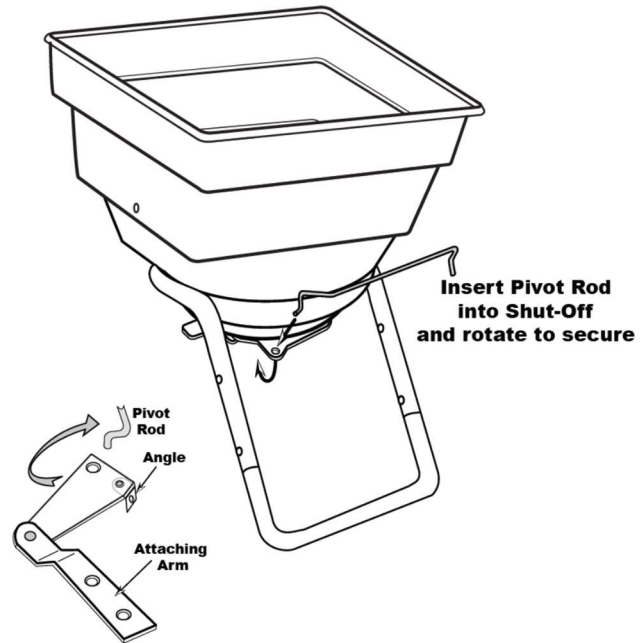


**Step 12:** Install HANDLE SHAFT to LOWER HANDLES and PIVOT & BRACKET assembly as shown. Using 2" (M6 x 1 x 50mm) bolts and locknuts. **TIGHTEN BOLTS AND NUTS NOW.**

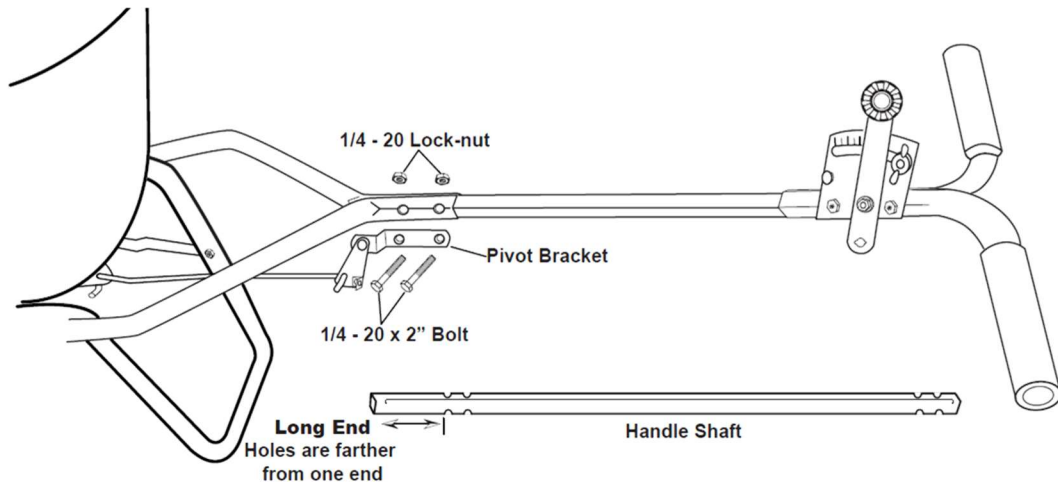

**Step 13:** Install flattened end of CONTROL ROD in to LEVER on GAUGE as shown. Turn to lock in place. Next push LEVER forward to setting "0". Align CONTROL ROD with hole in PIVOT BRACKET, pull LEVER backward to insert CONTROL ROD through hole in PIVOT BRACKET.


**Step 14:** Install (1) 1/4-20 (M6 X 1) regular nut (not a locknut) on to CONTROL ROD as shown.

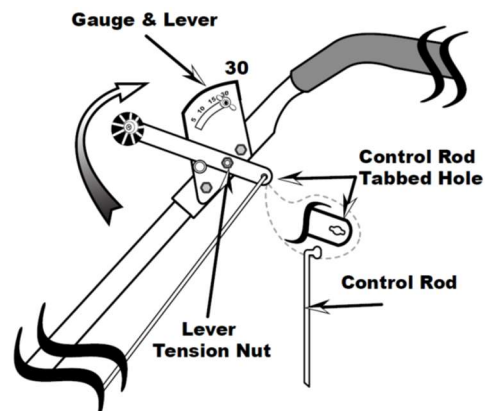

## CALIBRATION


**Step 15:** Pull lever back to setting "30" as shown. Next push pivot & bracket forward so that the shut off plate in the hopper is in the full open position. **REMEMBER SETTING "30" ON THE FLOW CONTROL LEVER MUST PLACE THE SHUT-OFF PLATE IN THE FULL OPEN POSITION TO BE PROPERLY CALIBRATED.** Now tighten the nuts against the PIVOT BRACKET to prevent change in calibration.

**NOTE:** Tension on the flow control lever may be adjusted by tightening or loosening the tension nut as shown.

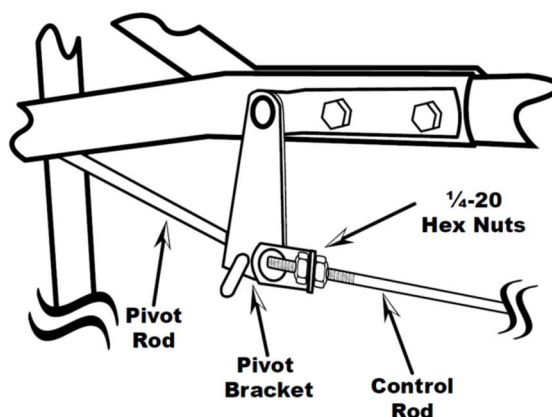

**Step 16:** Insert agitator to pinion shaft on inside of hopper.

**Note:** the position of flat side of the agitator. This pin should be installed as shown.

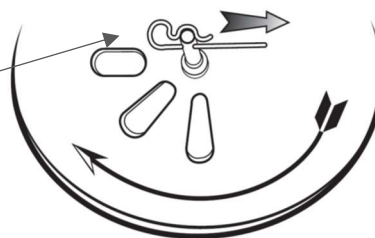


## SPREADER CALIBRATION INSTRUCTIONS

Professional turf managers only purchase spreaders that can be calibrated. National brand spreaders cannot be calibrated and thus provide poor results. To achieve optimal accuracy, we recommend you check your calibration every other year.

Open the spreader gauge to #30, inside the hopper, move control plate to the full open.


1. Open the shut-off so that the drop holes are completely open as illustrated to the right.
  2. Review the Control Lever position—if it is set so that the forward edge is at #30, you are calibrated. If not, you need to adjust the control rod at the pivot bracket shown
- A. If your shut-off is not able to open fully as in step #1. Loosen the top nut a few turns, then loosen the lower nut so that it allows you to push the shut-off open fully. Next tighten each nut so that they contact the pivot bracket without moving it, and then carefully tighten each nut fully so they do not loosen during use. Recheck adjustment as outlined in #1 above.
  - B. If your shut-off is able to open fully as in step #1, but the Control Lever is not at #30. Loosen the top nut a few turns, then loosen the lower nut so that it allows you to push the Control Lever to #30. Next tighten each nut so that they contact the pivot bracket without moving it. Carefully tighten each nut fully so they do not loosen during use. Recheck adjust as outlined in #1 above.

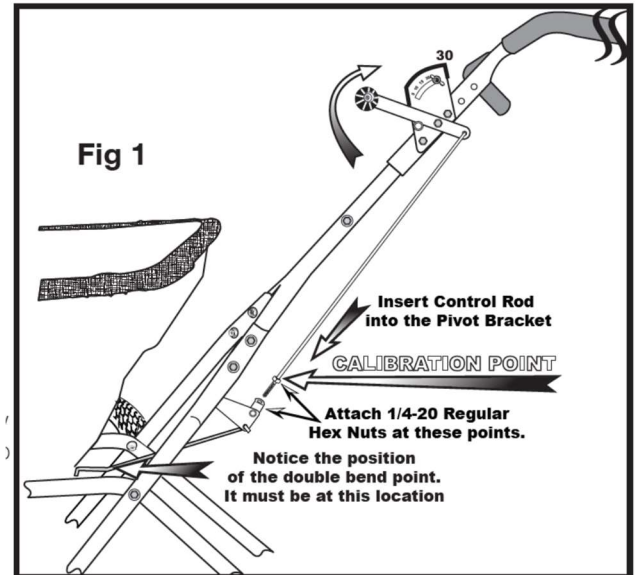



## OPERATING INSTRUCTIONS

- ☑ Obtain proper setting for material to be used from the enclosed SETTING MATRIX included with this spreader, or from our web site under the MANUALS SECTION.
- ☑ Set stop bolt on rate gauge assembly to the proper rate setting.
- ☑ While pushing spreader forward, pull control lever back to stop bolt, to stop spreading, push lever forward to close flow holes before you stop moving.
- ☑ When finished, empty any remaining material from hopper, rinse spreader, apply coating of light oil to all metal parts. The gearbox is sealed and is factory lubricated.

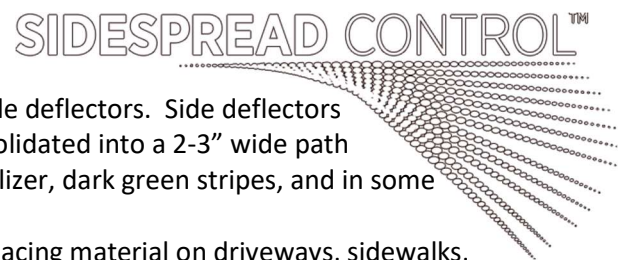

The **SideSpread-Control** is a patented innovation that is superior to side deflectors. Side deflectors block material leaving the impeller. This blocked material is now consolidated into a 2-3" wide path on the left inside wheel of your spreader. This equates to wasted fertilizer, dark green stripes, and in some cases this extra fertilizer (seven times) will damage the lawn.

**SideSpread-Control** maintains the correct application rate while not placing material on driveways, sidewalks, flowerbeds, or worse, the storm drains in your street. This saves you money and keeps you from damaging your lawn.

### To engage **SideSpread-Control**:

- 1) Locate the lever on under the right side of the hopper.
- 2) Slide the control lever from the front to the back.
- 3) Position the left wheel of your spreader 6"-12" from the sidewalk, flowerbed, or driveway and spread as normal.
- 4) When you have completed this spreading pass, close the control lever to "0", and then open the **SideSpread-Control™** by sliding the control lever from back to the front, for a **FULL**, 180 degree spread pattern.

---

## ONE YEAR WARRANTY

---

### Limited Warranty

EarthWay Products, Inc. provides this limited warranty that this product is free of defects in original workmanship and materials for a period of one year to the end user with the original purchase receipt. If a manufacturing non-conformance is found, EarthWay Products, Inc. at its discretion will repair or replace the part(s)/product at no charge provided the failure is not the result of incorrect installation, mishandling, misuse, tampering, improper storage, or normal wear and tear as determined by EarthWay. Due to the corrosive nature of most fertilizers and ice melt products, EarthWay Products, Inc. makes no warranty against and specifically excludes part(s) or product degradation or failure due to corrosion or its effects .

EarthWay at its discretion may require that the part(s) or product be returned along with the original purchase receipt for examination and compliance with the terms of this limited warranty. Do not return any product without first receiving authorization from EarthWay Products, Inc. IN NO EVENT SHALL EITHER PARTY BE LIABLE TO THE OTHER FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF SUCH PARTY SHALL HAVE BEEN ADVISED OF THE POSSIBILITY OF THE SAME.

To seek remedy under this limited warranty, contact EarthWay Products, Inc. at [support@earthway.com](mailto:support@earthway.com) or write to EarthWay Products, Inc. 1009 Maple Street, Bristol, IN 46507 and describe the nature of the manufacturing defect. SPECIFIC LIMITATIONS: This limited warranty covers only the part(s) or product; any labor charges associated with repair or replacement of non-conformances are specifically excluded.

The above-listed warranty procedure is a condition precedent to bringing any legal action to enforce this limited warranty. Any action to enforce any portion of this limited warranty must be commenced within ninety days after the expiration of the limited warranty coverage period. Any performance of repairs will not suspend this limitation period from expiring, unless state law provides otherwise. Any performance of repairs after the limited warranty coverage period has expired, or performance of repairs regarding anything excluded from coverage under this limited warranty shall be considered "good will" repairs, and they will not change the express terms of this limited warranty or extend the limited warranty coverage period.

Exclusive jurisdiction for deciding legal disputes relating to alleged breach of warranty or representations of any nature relating to this limited warranty must be filed in the courts of Elkhart County within the State of Indiana. Any and all claims, controversies, and causes of action arising out of or relating to this limited warranty, whether sounding in contract, tort or statute, will be governed by the laws of the State of Indiana, without giving effect to any choice or conflict of law provision or rule.

NO OTHER WARRANTY, EXPRESS, IMPLIED OR STATUTORY, SHALL APPLY, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY, APPLICATION OR FITNESS FOR A PARTICULAR PURPOSE, OR ANY OTHER WARRANTY OBLIGATION ON THE PART EARTHWAY, AND ALL SUCH WARRANTIES ARE EXPRESSLY DISCLAIMED. In the event that applicable law prevents the disclaimer of any implied warranties, then such implied warranty shall be limited to the fullest extent permitted by law. Without limiting the foregoing, if applicable prevents the disclaimer of any such implied warranties, this limited warranty limits the period of time in which a claim for breach of implied warranties, including but not limited to the implied warranty of merchantability or fitness for a particular purpose, may be filed. In such event, any claim for breach of implied warranty must be brought before the expiration of this express limited warranty's one year term.


## HOW TO ORDER SPARE PARTS – CALL or EMAIL:

**TURF DEPOT 800-305-9255 or [earthway@turfdepot.com](mailto:earthway@turfdepot.com)**

## CUSTOMER SERVICE

---

[SUPPORT@EARTHWAY.COM](mailto:SUPPORT@EARTHWAY.COM) | [www.EARTHWAY.com](http://www.EARTHWAY.com) | 1009 Maple Street, Bristol, IN 46507

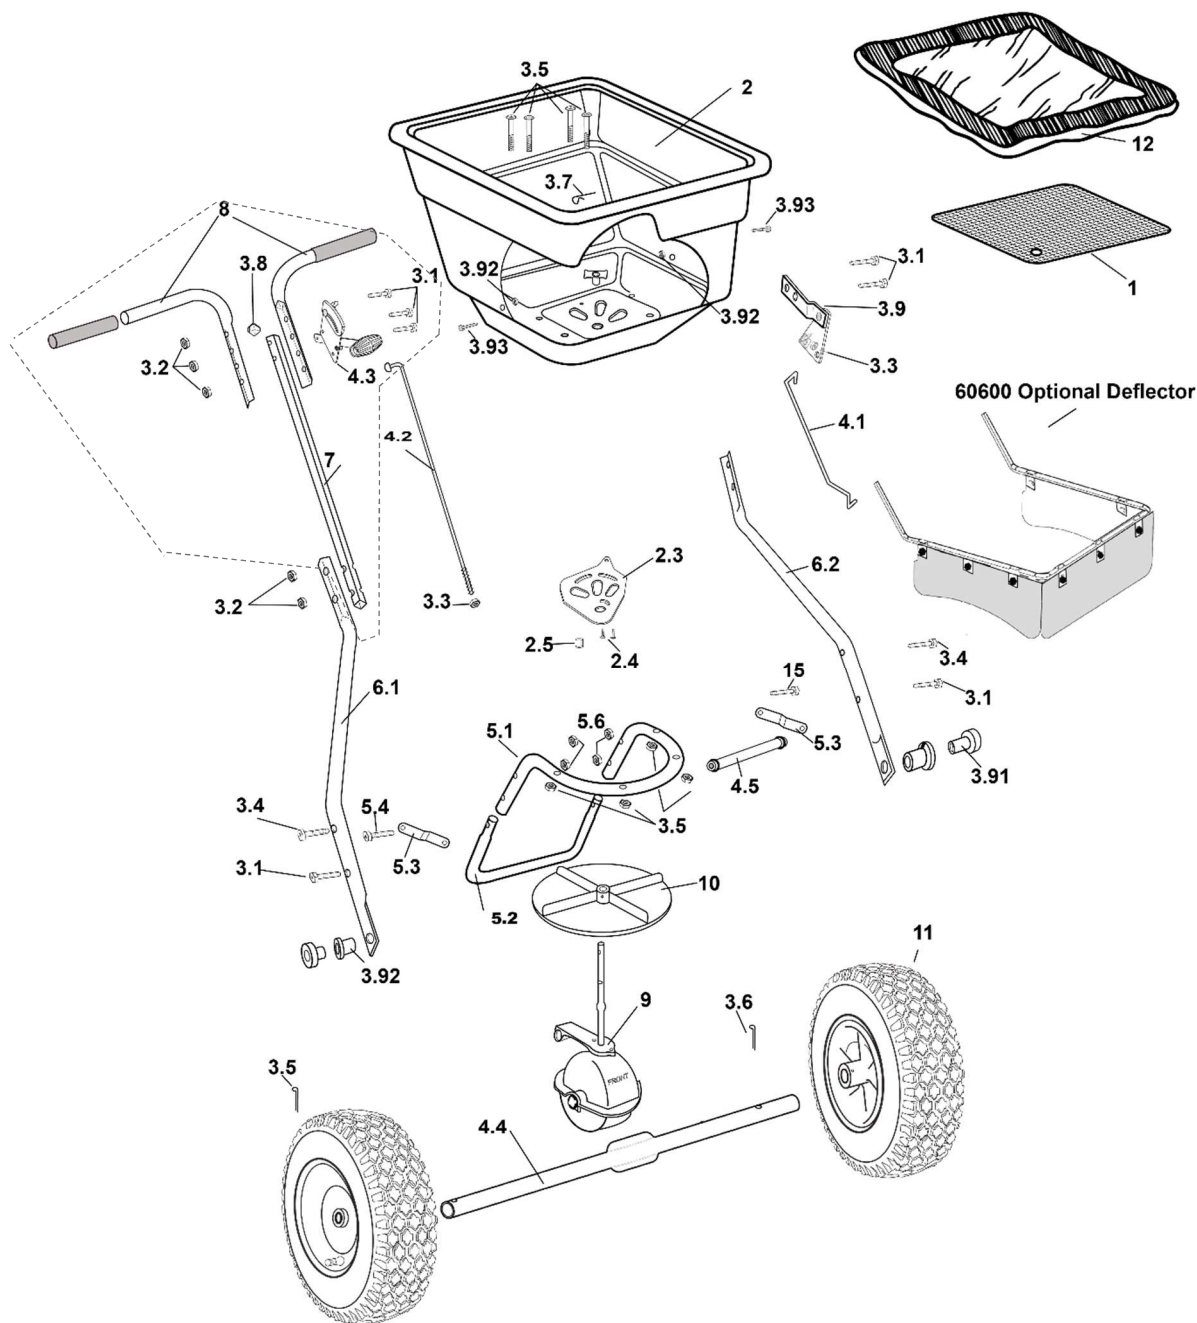

## 100 POUND (2170) Broadcast Spreader Parts List

SERIES	PART #	DESCRIPTION	SERIES	PART #	DESCRIPTION
1	40003	SQUARE SCREEN	8	60175	OPERATOR T-HANDLES
2	60335	HOPPER ASSEMBLY KIT (2.1 – 2.6)	9	60333	GEARBOX & IMPELLER SHAFT KIT (9.1-9.2)
3	38144	HARDWARE KIT (3.1 - 3.92)	10	12110	IMPELLER
4	60260	CONTROL KIT & X-BRACE KIT (4.1- 4.5)	11	70138	13" PNEUMATIC TIRE
5	60603	LOWER FRAME ASSY KIT (5.1 – 5.6)	4.3	60298	GAUGE & LEVER ASSEMBLY
6	25222	HANDLE TO FRAME AXLE ARMS (6.1 & 6.2)	12	F77130	HEAVY DUTY RAIN COVER ACCESSORY
7	25223	HANDLE SHAFT - SQUARE		60600	THREE SIDE DEFLECTOR KIT