



On behalf of our entire team, we thank you for choosing EarthWay.

Your 2750 Seeder / Spreader is pre-assembled at the factory, leaving only the handle crank for you to attach.

When attaching the crank, thread the crank onto crankshaft by turning the hex nut clockwise two revolutions. It is not necessary to tighten, the crank will tighten itself as you use it.

Your Earthway 2750 is now ready for use!

RATE SETTINGS

Field Seed							
Type	Spread Width (ft)	Setting	LBS/Acre	Type	Spread Width (ft)	Setting	LBS/Acre
Alfalfa	18	2 ½	20	Timothy	25	1	2 ¾
Atla Fescue/Kentucky 31	11	3 ½	5	Wheat	14	4 ½	90
Birdsfoot Trefoil	20	1 ¾	4	Yello Mustard	20	2 ½	7 ¾
Clovers	18	2 ¼	8	Imperial White Tall Clover	18	1 ¾	8
Flax or Miller	18	2 ½	25	Bermuda	7 ½	2 ½	2 ¼
Hairy Vetch	18	3 ½	20	Coarse Mix	12	4 ½	1
Kentucky Bluegrass	8	3 ½	49 ½	Fine Mixture	10	3 ½	4
Lespedeza – Unhulled	16	2	15	Merlon Blue	7 ½	2 ½	¼
Lespedeza – Hulled	16	2	12	Rye Grass	13	4 ½	1
Oats	16	5 ½	64				
Orchard Grass	10	2 ½	14	Fertilizer*			
Red Top	10	1 ½	6	Granular	18	4 ½	2
Rape	21	2 ½	6 ¾	Slow Release Nitrogen	14	4 ½	3
Sweet Sudan Grass	24	3 ¾	25	Pellet Type	28	4 ½	1

*Note that the fertilizer is measured in LBS/1,000sq ft.

OPERATING INSTRUCTIONS

Before filling the bag, become familiar with the operation of your spreader.

- ☑ Obtain proper setting for material to be used from the rate-setting chart found in this manual or on the underside of the unit.
- ☑ Loosen wing nut and move setting indicator to proper setting. (Unit is in closed position when gauge lever is on the stop bubble). Tighten wing nut after adjustment.
- ☑ To fill, make sure the gauge lever is in the closed position. Fill bag approximately 1/2 to 2/3 full.
- ☑ To wear the spreader, please grab spreader by the base and situate the strap over your neck and shoulder. This will make sure the bag stays in place during use.
- ☑ Always start by walking and turning handle crank before opening the shutoff plate. To open plate, simply pull the gauge lever back and onto the indicator. The hole on the lever will match up with the bolt on the indicator.
- ☑ Crank should make one revolution for each step taken with your right foot to ensure proper distribution rate. A walking speed of 3mph is recommended.
- ☑ To close shutoff plate, simply push up on gauge lever and move it back to the closed position, securing it on the stop bubble.

The settings furnished on the [Rate Setting Matrix](#) are intended as a guide only. Variations in physical characteristics of material applied, walking speed, and roughness of ground surface may require slightly different spreader settings. Due to the above conditions, the manufacturer makes no warranty as to accuracy of the rate applied.

CUSTOMER SERVICE

SUPPORT@EARTHWAY.COM | www.EARTHWAY.com | 1009 Maple Street, Bristol, IN 46507

ONE YEAR WARRANTY

Limited Warranty

EarthWay Products, Inc. provides this limited warranty that this product is free of defects in original workmanship and materials for a period of one year to the end user with the original purchase receipt. If a manufacturing non-conformance is found, EarthWay Products, Inc. at its discretion will repair or replace the part(s)/product at no charge provided the failure is not the result of incorrect installation, mishandling, misuse, tampering, improper storage, or normal wear and tear as determined by EarthWay. Due to the corrosive nature of most fertilizers and ice melt products, EarthWay Products, Inc. makes no warranty against and specifically excludes part(s) or product degradation or failure due to corrosion or its effects .

EarthWay at its discretion may require that the part(s) or product be returned along with the original purchase receipt for examination and compliance with the terms of this limited warranty. Do not return any product without first receiving authorization from EarthWay Products, Inc. IN NO EVENT SHALL EITHER PARTY BE LIABLE TO THE OTHER FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF SUCH PARTY SHALL HAVE BEEN ADVISED OF THE POSSIBILITY OF THE SAME. To seek remedy under this limited warranty, contact EarthWay Products, Inc. at support@earthway.com or write to EarthWay Products, Inc. 1009 Maple Street, Bristol, IN 46507 and describe the nature of the manufacturing defect. SPECIFIC LIMITATIONS: This limited warranty covers only the part(s) or product; any labor charges associated with repair or replacement of non-conformances are specifically excluded.

The above-listed warranty procedure is a condition precedent to bringing any legal action to enforce this limited warranty. Any action to enforce any portion of this limited warranty must be commenced within ninety days after the expiration of the limited warranty coverage period. Any performance of repairs will not suspend this limitation period from expiring, unless state law provides otherwise. Any performance of repairs after the limited warranty coverage period has expired, or performance of repairs regarding anything excluded from coverage under this limited warranty shall be considered “good will” repairs, and they will not change the express terms of this limited warranty or extend the limited warranty coverage period.

Exclusive jurisdiction for deciding legal disputes relating to alleged breach of warranty or representations of any nature relating to this limited warranty must be filed in the courts of Elkhart County within the State of Indiana. Any and all claims, controversies, and causes of action arising out of or relating to this limited warranty, whether sounding in contract, tort or statute, will be governed by the laws of the State of Indiana, without giving effect to any choice or conflict of law provision or rule.

NO OTHER WARRANTY, EXPRESS, IMPLIED OR STATUTORY, SHALL APPLY, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY, APPLICATION OR FITNESS FOR A PARTICULAR PURPOSE, OR ANY OTHER WARRANTY OBLIGATION ON THE PART EARTHWAY, AND ALL SUCH WARRANTIES ARE EXPRESSLY DISCLAIMED. In the event that applicable law prevents the disclaimer of any implied warranties, then such implied warranty shall be limited to the fullest extent permitted by law. Without limiting the foregoing, if applicable prevents the disclaimer of any such implied warranties, this limited warranty limits the period of time in which a claim for breach of implied warranties, including but not limited to the implied warranty of merchantability or fitness for a particular purpose, may be filed. In such event, any claim for breach of implied warranty must be brought before the expiration of this express limited warranty’s one year term.