



Thank you for selecting EarthWay for your spreader needs. Our production team in Northern Indiana takes pride in building this

spreader. Our customer support team is standing ready to ensure your success. Please contact us at www.EarthWay.com to see our full line of commercial, lawn & garden tools.

Note: Your EarthWay spreader includes a feature called side spread control. This feature turns off fertilizer from being spread to the left side. To activate this feature, slide the lever below the hopper to the right (if standing behind the spreader) and walk along a sidewalk or flowerbed that is 12"-14" on your left side. Fertilizer will not spread to the left. This feature is better than a deflector as no material is wasted by the deflector.

OPERATING INSTRUCTIONS

Before filling hopper, become familiar with the operation of this spreader.

- ☑ Obtain proper setting for material to be used from the enclosed SETTING MATRIX included with this spreader, or from our web site under the MANUALS SECTION.
- ☑ Move stop bolt on rate gauge assembly to the proper setting and tighten to secure.
- ☑ While pushing spreader forward, push control lever forward to the stop bolt. To stop, pull lever back to close flow holes before you stop moving.
- ☑ When finished, empty any remaining material from hopper.
- ☑ Thoroughly wash spreader and dry before storing.
- ☑ **To prevent corrosion, spray a light oil or Fluid Film inside the tubing of the chassis and on all metal parts.**
- ☑ If using **Rock Salt**, to prevent damage to the gearbox remove salt from the hopper daily. **Rock Salt** will reconstitute back into a solid block if left in the hopper overnight and will damage your gearbox if operated with the salt in place

For spreading, please utilize the following spreader settings:

Spreader Setting	Lbs sq foot	Grams sq meter
11	1.0	5
13	2.0	10
14	3.0	15
16	4.0	20
17	5.0	25
18	6.0	30
19	7.0	35
20	8.0	40
22	9.0	45
23	10.0	50

HELPFUL HINTS

- ☑ If your spreader does not spread evenly, be sure the FRONT on the gear box points to the front of the spreader. The impeller must turn clockwise. Reversing the gearbox will cause the impeller to turn counter clockwise. Clean the impeller plate after each use. Fertilizer stuck on the impeller blades will cause uneven spreading.
- ☑ Your spreader is designed to be pushed at three miles per hour, which is a brisk walking speed. Slower or faster speeds will change the spread patterns. Wet fertilizer will also change the spread pattern and flow rate. Clean and dry your spreader thoroughly after each use. Coat all metal surfaces (**pay special attention to the inside & outside of tubing - it's easiest to do while assembling**) with light oil, Fluid Film® or silicon spray to help prevent corrosion. Wash between the shut off plate and bottom of the hopper. **Do not use powdered materials.**
- ☑ Gears are permanently lubricated at the factory. Do not open the gearbox or dirt may enter.

The settings furnished on the [Rate Setting Matrix](#) are intended as a guide only. Variations in physical characteristics of material applied, walking speed, and roughness of ground surface may require slightly different spreader settings. Due to the above conditions, the manufacturer makes no warranty as to the uniformity of coverage actually obtained from the settings listed.

NEW FEATURE

The **SideSpred-Control™** is a new innovation that eliminates the need to use a side deflector, which can adversely affect your application rate, to prevent material from being spread into flowerbeds, on sidewalks, or driveways. The **SideSpred-Control™** maintains the correct application rate while it is activated, giving you excellent results in seeding or spreading while controlling the spread pattern on the left side of the spreader. The **SideSpred-Control™** is an EarthWay exclusive.

SideSpred-Control™ OPERATION

The **SideSpred-Control™** lever is located under the right side of the hopper. To operate the **SideSpred-Control™**, slide the control lever from the front to the back. This will activate the **SideSpred-Control™** for a **PARTIAL** spread pattern and prevent material from being spread to the left side of the spreader. Position the left wheel of your spreader 4"–6" from the sidewalk, flowerbed, or driveway and spread as normal. When you have completed this spreading pass, close the control lever to "0", and then open the **SideSpred-Control™** by sliding the control lever from back to the front, for a **FULL** spread pattern.

CUSTOMER SERVICE

574.848.7491 | SUPPORT@EARTHWAY.COM | www.EARTHWAY.com | 1009 Maple Street, Bristol, IN 46507

ONE YEAR WARRANTY

EarthWay Products, Inc. warrants this product free of defects in original workmanship and materials for a period of one year to the end user with the original purchase receipt. If a manufacturing non-conformance is found, EarthWay Products, Inc. at its discretion will repair or replace the part(s)/product at no charge provided the failure is not the result of incorrect installation, mishandling, misuse, tampering, or normal wear and tear as determined by EarthWay.

EarthWay at its discretion may require that the part(s) or product be returned along with the original purchase receipt for examination and compliance with the terms of this warranty. Do not return any product without first receiving authorization from EarthWay Products, Inc.


To seek remedy under this warranty, contact EarthWay Products, Inc. at 574-848-7491, support@earthway.com or write to EarthWay Products, Inc. 1009 Maple Street, Bristol, IN 46507 and describe the nature of the manufacturing defect. **SPECIFIC LIMITATIONS:** This warranty covers only the part(s) or product; any labor charges associated with repair or replacement of non-conformances are specifically excluded. Due to the corrosive nature of most fertilizers and ice melt products, EarthWay Products, Inc. makes no warranty against and specifically excludes part(s) or product degradation or failure due to corrosion or its effects.

HOW TO ORDER SPARE PARTS

All spare parts listed herein may be ordered direct from the manufacturer. Be sure to give the following information when ordering.

- Model Number
- Part Number
- Part Description

You can contact us by calling (574) 848-7491 to place an order with a credit card, or purchase online at www.EarthWay.com. Questions? Email us at sales@earthway.com

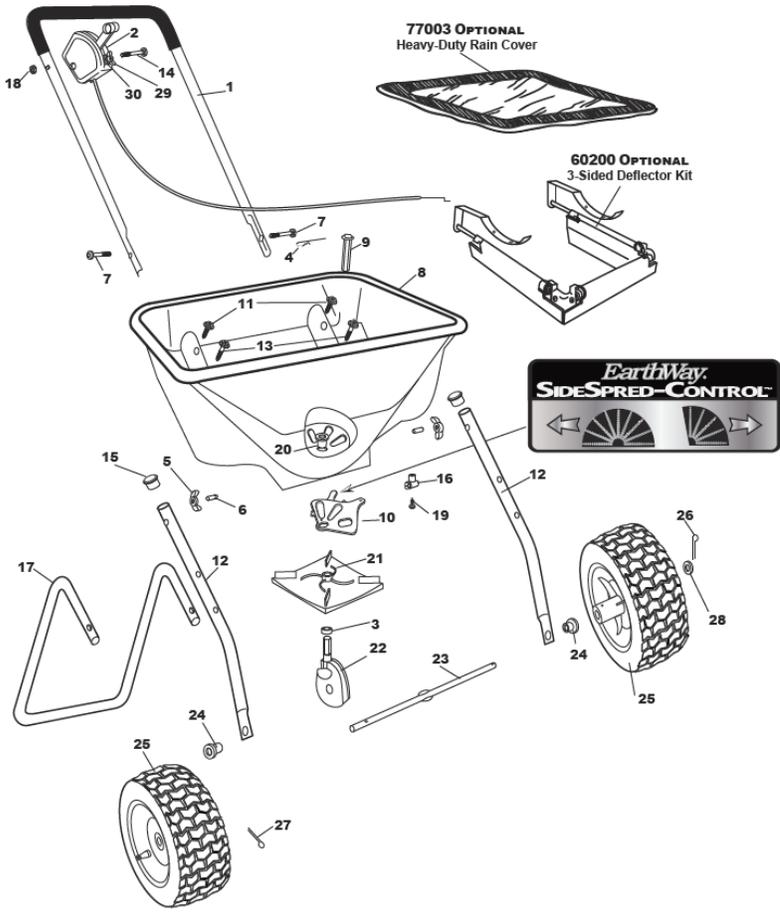

2030P Broadcast Spreader Parts List		
KEY #	PART #	DESCRIPTION
1	60346	UPPER HANDLE W/GRIP
2	60519	CONTROL ASSEMBLY
3	12201	DUST COVER (GEAR BOX) HEX
4	33117	AGITATOR
5	60027	WING NUT ASSEMBLY BLACK
6	70142	NUT PROTECTOR
7	37116	1/4-20 X 2 1/4 CARRIAGE BOLT
8	60244	HOPPER ASSEMBLY
9	12275	AGITATOR SHAFT
10	12269	New SSC SHUT OFF PLATE
11	31141	#14 X 3/4" TYPE "AB"
12	25721	LOWER HANDLE
13	31163	#14 X 1 1/2 TYPE AB HWHS
14	37108	1/4-20 X 1 3/4" CARRIAGE BOLT
15	19132	7/8" TUBE PLUG
16	12349	LOWER HOUSING CLAMP
17	25720	STAND
18	32100	1/4-20 HEX NUT ZINC
19	31136	#8 X 1 PHPS DEEP THREAD
20	12251	HOPPER BUSHING
21	12255	IMPELLER
22	60257	GEAR BOX ASSEMBLY
23	23519	AXLE (PLUS SERIES PNEUMATIC)
24	12197	SPACER BEARING
26	70149	9 IN PNEUMATIC WHEEL
27	33106	1/8" X 3/4" COTTER PIN ZINC
28	33107	1/8" X 1 3/4" COTTER PIN S.S.
29	34103	1"OD X 17/32"ID X 1/32" WASHER ZINC
30	32106	10-24 WING NUT ZINC

You can find replacement Nuts and Bolts at your local hardware store.